


Disassembly

Part 1 Of 2

1ZZ-FE:

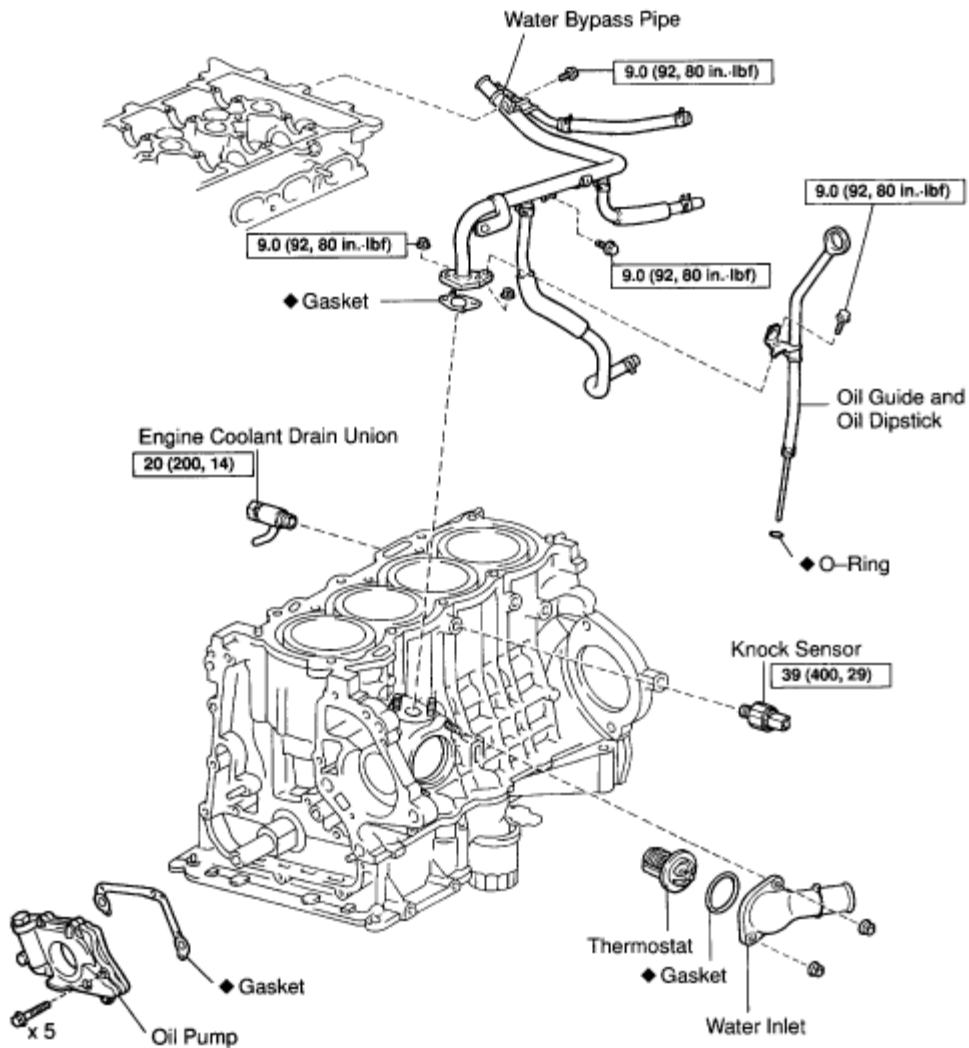

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

ZOOM

SIZED FOR PRINT

Part 1 Of 2

2ZZ-GE:

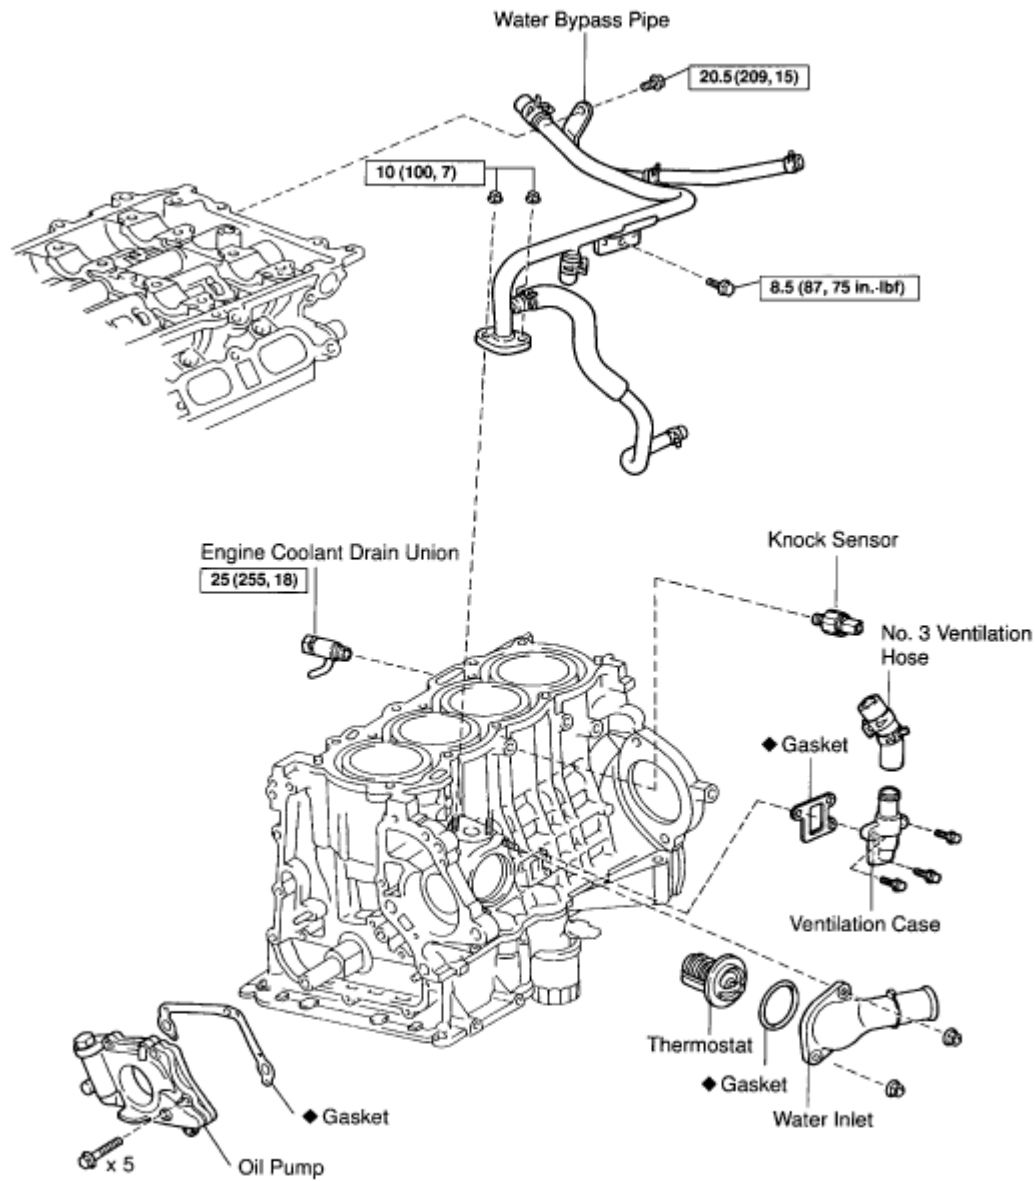


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

ZOOM

SIZED FOR PRINT


1ZZ-FE:

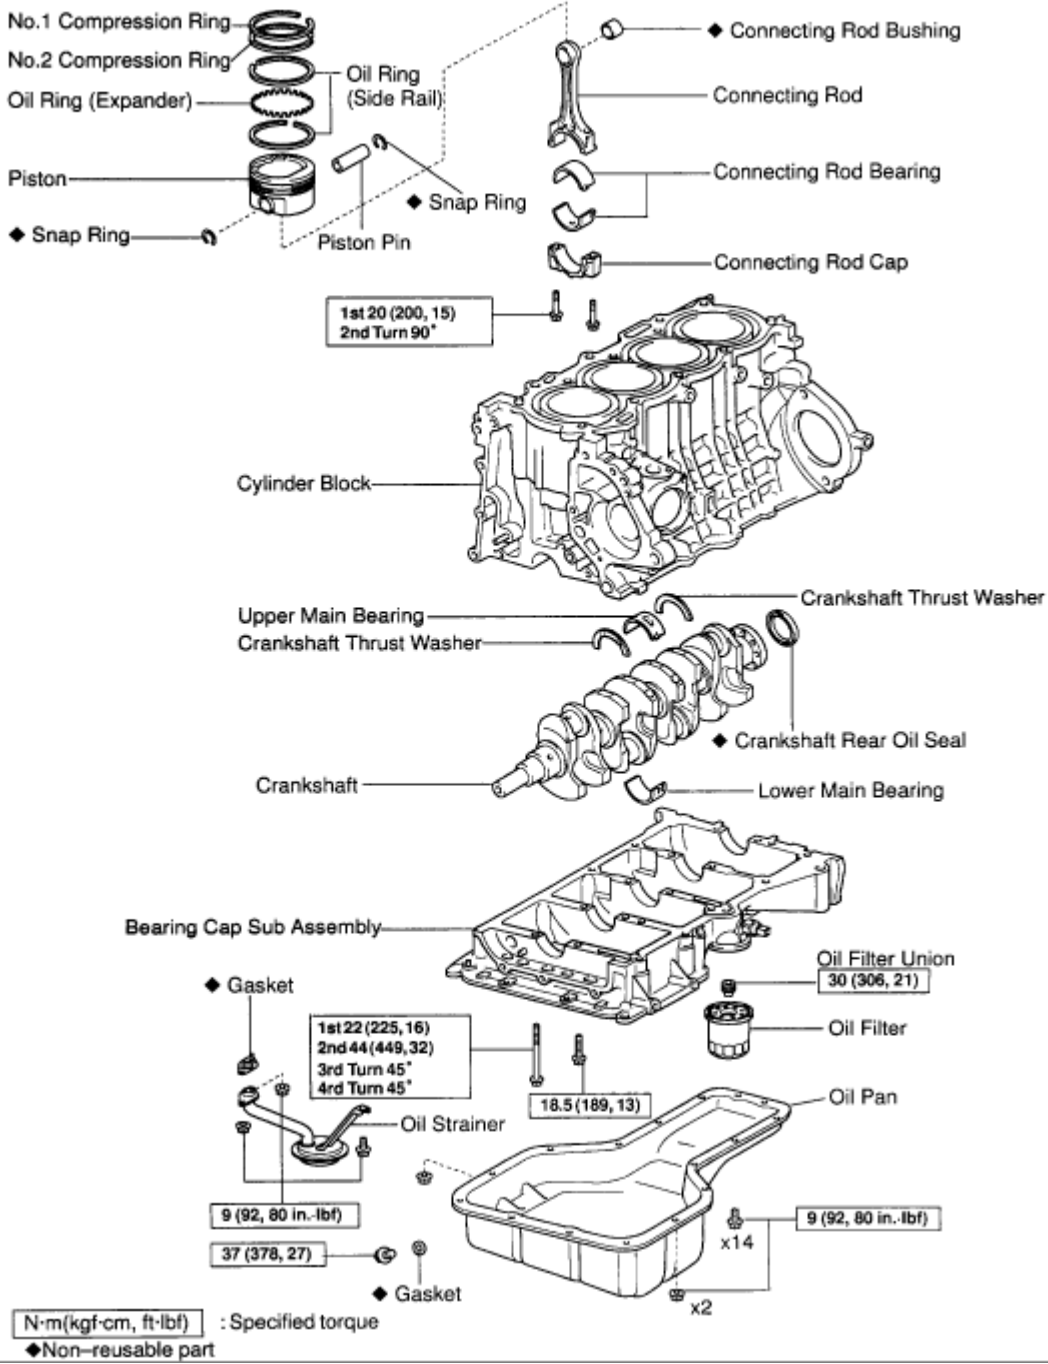

ZOOM

SIZED FOR PRINT

2ZZ-GE:

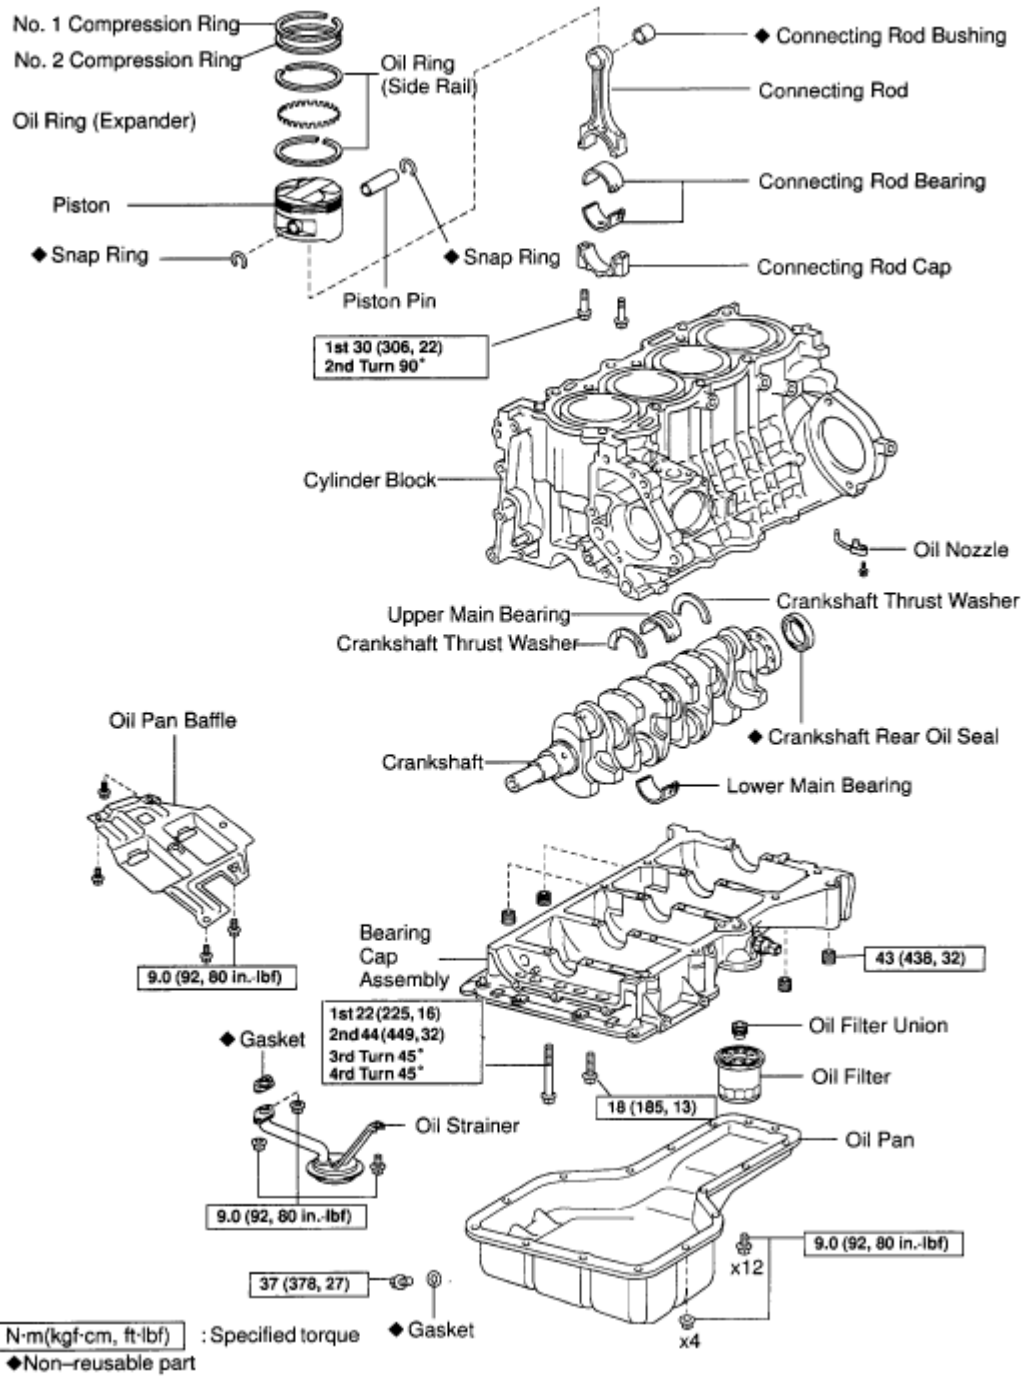


ZOOM

SIZED FOR PRINT

DISASSEMBLY

1. M/T: REMOVE FLYWHEEL
2. A/T: REMOVE DRIVE PLATE
3. INSTALL ENGINE TO ENGINE STAND FOR DISASSEMBLY
4. REMOVE [TIMING CHAIN](#) AND SPROCKETS [See: Engine](#)
5. REMOVE ENGINE WIRE
6. REMOVE CYLINDER HEAD [See: Cylinder Head Assembly](#)

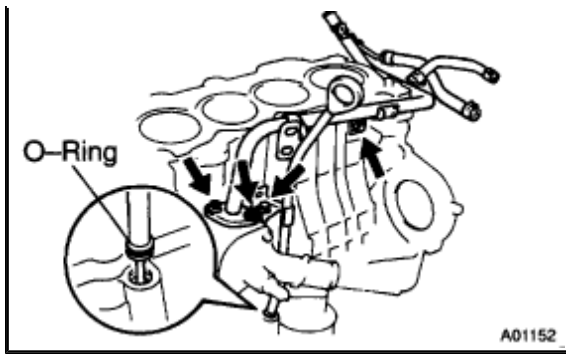

ZOOM

SIZED FOR PRINT

7. 1ZZ-FE: REMOVE OIL DIPSTICK AND GUIDE

- a. Remove the bolt and oil dipstick and guide.
- b. Remove the O-ring from the dipstick.


8. REMOVE WATER BYPASS PIPE Remove the 2 nuts, bolts and water bypass pipe.

9. REMOVE THERMOSTAT [See: Cooling System](#)

10. REMOVE KNOCK SENSOR

11. REMOVE ENGINE COOLANT DRAIN UNION

12. REMOVE [OIL PUMP](#) [See: Engine Lubrication](#)

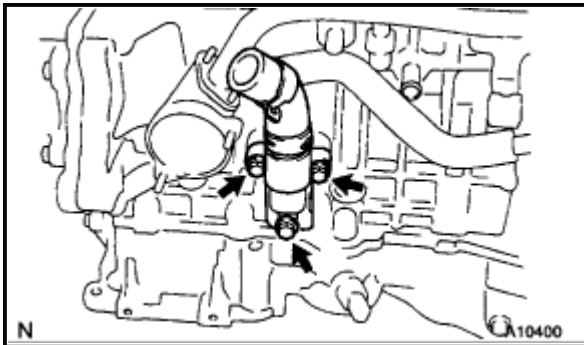


ZOOM

SIZED FOR PRINT

13. 2ZZ-GE: REMOVE VENTILATION CASE


- a. Remove the 3 nuts, ventilation case and gasket.
- b. Remove the clip and No. 3 ventilation hose.

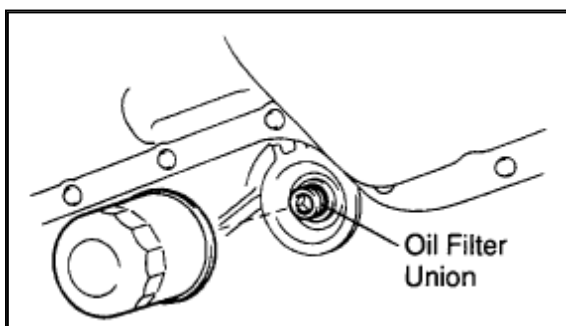

ZOOM


SIZED FOR PRINT

14. REMOVE [OIL FILTER](#)
15. REMOVE [OIL FILTER](#) UNION Using a 12 mm hexagon wrench, remove the [oil filter](#) union.
16. REMOVE [OIL PAN](#)

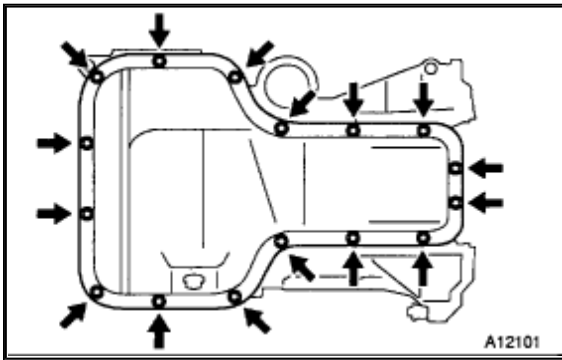


ZOOM SIZED FOR PRINT

- a. 1ZZ-FE: Remove the 14 bolts and 2 nuts.
- b. 2ZZ-GE: Remove the 12 bolts and 4 nuts.

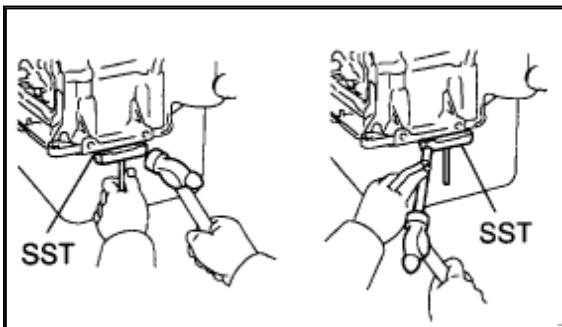


ZOOM SIZED FOR PRINT

- c. Insert the blade of Special Service Tool (SST) between the bearing cap sub-assembly and [oil pan](#), and cut off applied sealer and remove the oil pan. (SST) 09032-00100 **NOTICE:**
 - o Be careful not to damage the [oil pan](#) contact surface of the bearing cap sub-assembly.
 - o Be careful not to damage the [oil pan](#) flange.

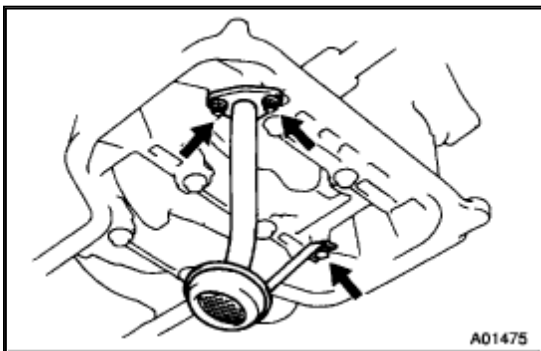

ZOOM SIZED FOR PRINT

17. 1ZZ-FE: REMOVE OIL STRAINER Remove the 2 nuts, bolt, oil strainer and gasket.

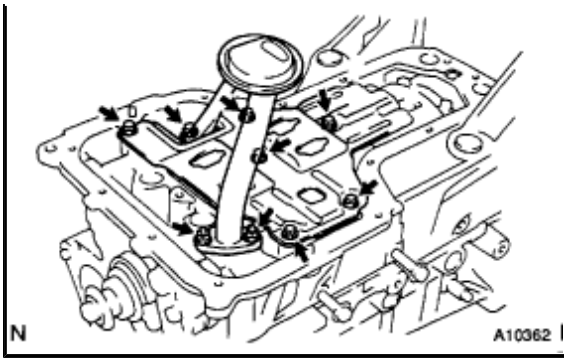


ZOOM

SIZED FOR PRINT

18. 2ZZ-GE: REMOVE OIL STRAINER AND [OIL PAN BAFFLE](#)


- a. Remove the 2 nuts, bolt, oil strainer and gasket.
- b. Remove the 4 bolts, 2 nuts and [oil pan baffle](#).

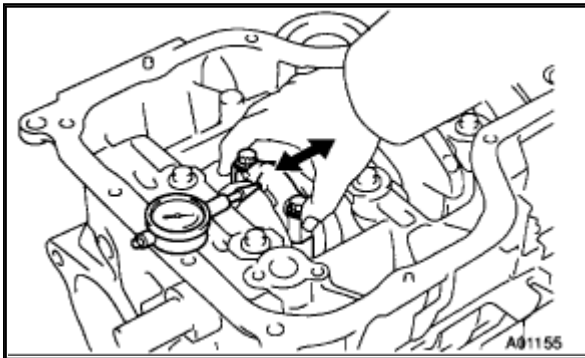

ZOOM

SIZED FOR PRINT


19. CHECK [CONNECTING ROD](#) THRUST CLEARANCE Using a dial indicator, measure the thrust clearance while moving the [connecting rod](#) back and forth. Standard thrust clearance: **0.160 - 0.342 mm (0.0063 - 0.0135 inch)**
Maximum thrust clearance: **0.342 mm (0.0135 inch)** If the thrust clearance is greater than maximum, replace the [connecting rod](#) assembly(s). If necessary, replace the [crankshaft](#). [Connecting rod](#) thickness: 1ZZ-FE: **19.788 - 19.840 mm (0.7791 - 0.7811 inch)**
20. REMOVE [CONNECTING ROD](#) CAPS AND CHECK OIL CLEARANCE

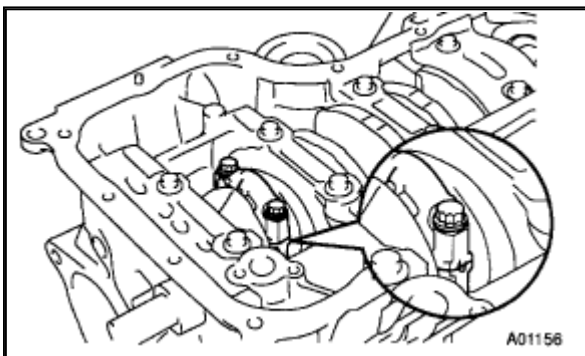

ZOOM

SIZED FOR PRINT


- a. Check the matchmarks on the [connecting rod](#) and cap are aligned to ensure correct reassembly.
 - b. Remove the 2 connecting rod cap bolts.
-

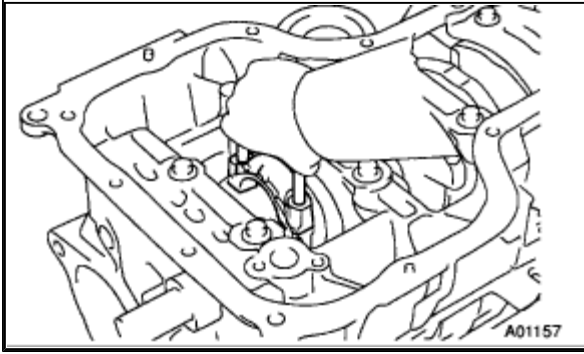

ZOOM

SIZED FOR PRINT


- c. Using the 2 removed connecting rod cap bolts, remove the [connecting rod](#) cap and lower bearing by wiggling the connecting rod cap right and left. **HINT:** Keep the lower bearing inserted with the [connecting rod](#) cap.

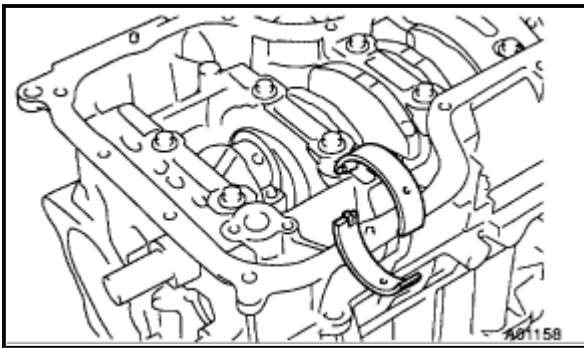

ZOOM

SIZED FOR PRINT

- d. Clean the crank pin and bearing.
e. Check the crank pin and bearing for pitting and scratches. If the crank pin or bearing is damaged, replace the bearings. If necessary, replace the [crankshaft](#).

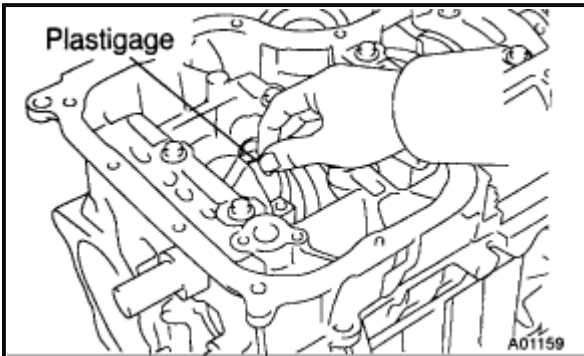


ZOOM

SIZED FOR PRINT

- f. Lay a strip of Plastigage the crank pin.



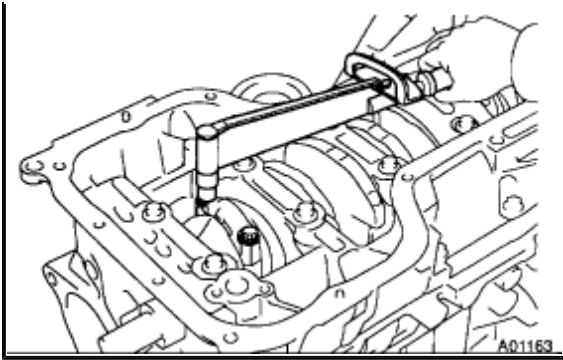

ZOOM

SIZED FOR PRINT

- g. Install the [connecting rod](#) cap with the 2 bolts. Torque: 1st:


1ZZ-FE: **20 Nm (204 kgf-cm, 15 ft. lbs.)**

2ZZ-GE: **30 Nm (306 kgf-cm, 22 ft. lbs.)**

2nd: **Turn extra 90°**

NOTICE: Do not turn the [crankshaft](#).


- h. Remove the 2 bolts, [connecting rod](#) cap and lower bearing. (See procedure b. and c. above)

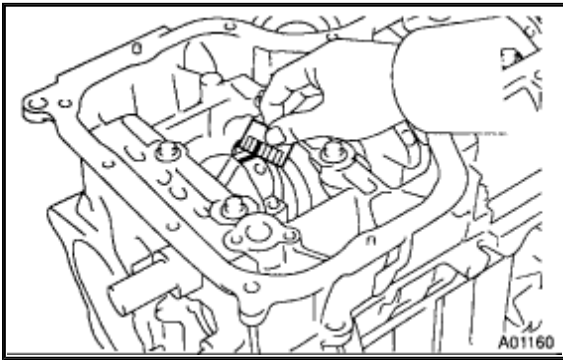

ZOOM

SIZED FOR PRINT

- f. Measure the Plastigage at its widest point. Standard oil clearance: 1ZZ-FE: **0.028 - 0.060 mm (0.0011 - 0.0024 inch)**
2ZZ-GE: **0.028 - 0.052 mm (0.0011 - 0.0020 inch)** Maximum oil clearance: **0.08 mm (0.0031 inch)** If the oil clearance is greater than maximum, replace the bearings. If necessary, grind or replace the [crankshaft](#).

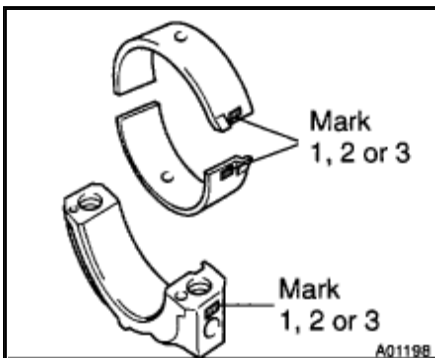

ZOOM

SIZED FOR PRINT

HINT: If replacing a bearing, replace it with one having the same number as marked on the [connecting rod](#). There are 3 sizes

of standard bearings, marked "1", "2" and "3" accordingly.

Reference

Standard bearing center wall thickness:

Mark	mm (in.)
"1"	1.486 – 1.490 (0.0585 – 0.0587)
"2"	1.490 – 1.494 (0.0587 – 0.0588)
"3"	1.494 – 1.498 (0.0588 – 0.0590)

ZOOM

SIZED FOR PRINT

1ZZ-FE:


Mark	mm (in.)
"1"	1.482 – 1.486 (0.0583 – 0.0585)
"2"	1.486 – 1.490 (0.0585 – 0.0587)
"3"	1.490 – 1.494 (0.0587 – 0.0588)

ZOOM

SIZED FOR PRINT

2ZZ-GE:

- j. Completely remove the Plastigage.

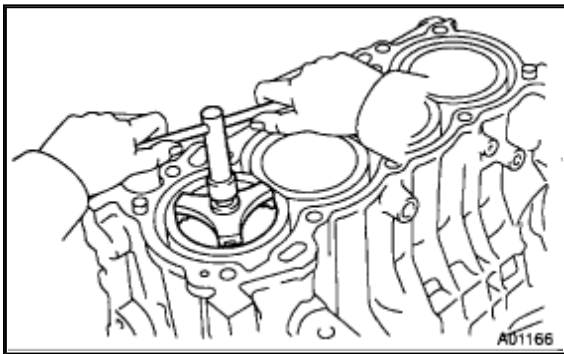

ZOOM

SIZED FOR PRINT


21. REMOVE **PISTON** AND **CONNECTING ROD** ASSEMBLIES

- a. Using a ridge reamer, remove all the carbon from the top of the cylinder.
- b. Push the **piston, connecting rod** assembly and upper bearing through the top of the cylinder block. **HINT:**
 - o Keep the bearings, **connecting rod** and cap together.
 - o Arrange the **piston** and **connecting rod** assemblies in the correct order.


22. REMOVE BEARING CAP SUB-ASSEMBLY AND CRANKSHAFT REAR OIL SEAL, AND CHECK OIL CLEARANCE



1ZZ-FE:

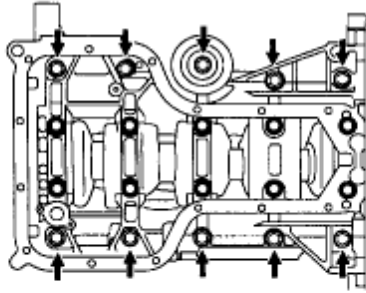


2ZZ-GE:

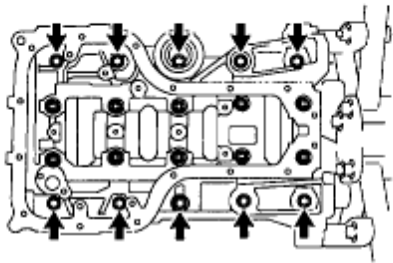

ZOOM

SIZED FOR PRINT


- 2ZZ-GE: Remove the 4 screw plugs from the bearing cap sub-assembly.
- Remove the 10 hexagon head bearing cap sub-assembly bolts.
- Uniformly loosen and remove the 10 bearing cap sub-assembly bolts, in several passes, in the sequence shown.

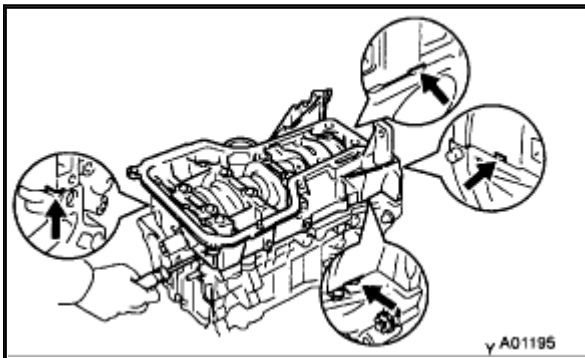


ZOOM

SIZED FOR PRINT

 - Using a screwdriver, remove the bearing cap sub-assembly by prying the portions between the cylinder block and bearing cap sub-assembly. Remove the 5 lower main bearings. **NOTICE:** Be careful not to damage the contact surfaces of the cylinder block and bearing cap sub-assembly. **HINT:** Keep the lower bearing and bearing cap sub-assembly together.
- Remove the crankshaft rear oil seal.
- Lift out the [crankshaft](#). **HINT:** Keep the upper bearings together with the cylinder block.




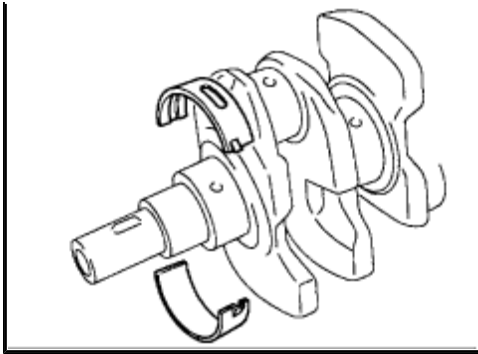

ZOOM

SIZED FOR PRINT


- g. Clean each main journal and bearing.
- h. Check each main journal and bearing for pitting and scratches. If the journal or bearing is damaged, replace the bearings. If necessary, replace the [crankshaft](#).
- i. Place the [crankshaft](#) on the cylinder block.

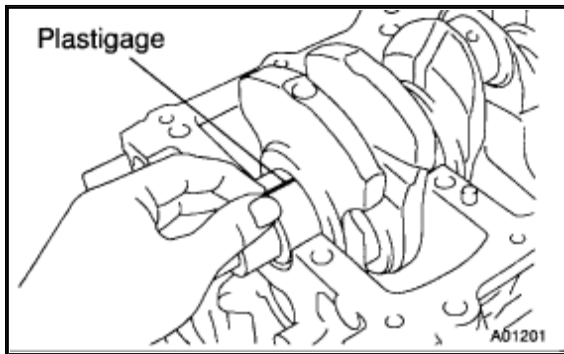

ZOOM

SIZED FOR PRINT

- j. Lay a strip of Plastigage across each journal.
- k. Install the bearing cap sub-assembly. **NOTICE:** Do not turn the [crankshaft](#).
- l. Remove the bearing cap sub-assembly (See procedures a. to e. above).

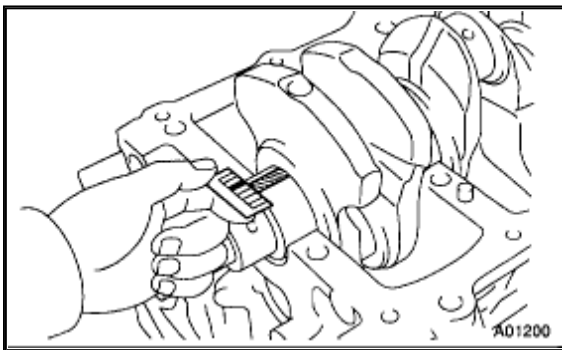


ZOOM

SIZED FOR PRINT

- m. Measure the Plastigage at its widest point. Standard oil clearance: 1ZZ-FE: **0.015 - 0.032 mm (0.0006 - 0.0013 inch)**
2ZZ-GE: **0.016 - 0.032 mm (0.0006 - 0.0013 inch)** Maximum oil clearance: **0.050 mm (0.0020 inch)** If the oil clearance is greater than maximum, replace the bearings. If necessary, replace the [crankshaft](#).



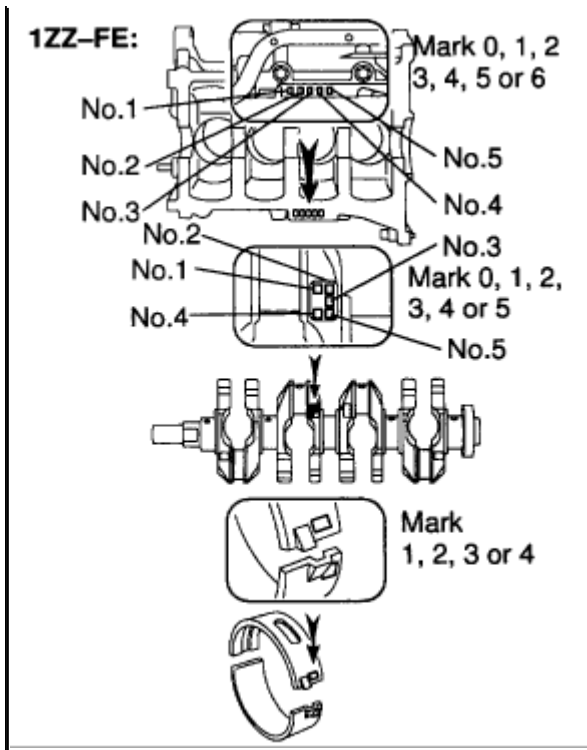

ZOOM

SIZED FOR PRINT

Cylinder block Number mark	Crank shaft number mark					
	0	1	2	3	4	5
0	1	1	1	2	2	2
1	1	1	2	2	2	3
2	1	2	2	2	3	3
3	2	2	2	3	3	3
4	2	3	3	3	4	4
5	3	3	3	4	4	4
6	3	3	4	4	4	5

EXAMPLE: Cylinder block "4", Crank shaft "3", Use bearing "3"



ZOOM

SIZED FOR PRINT

- n. 1ZZ-FE: If using a standard bearing, replace it with one having the same number. If the number of the bearing cannot be determined, select the correct bearing by adding together the numbers imprinted on the cylinder block and [crankshaft](#), then selecting the bearing with the same number as the total. There are 4 sizes of standard bearings, marked "1", "2", "3" and "4" accordingly.



2ZZ-GE:

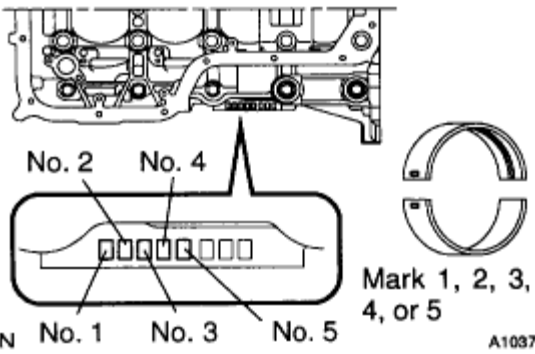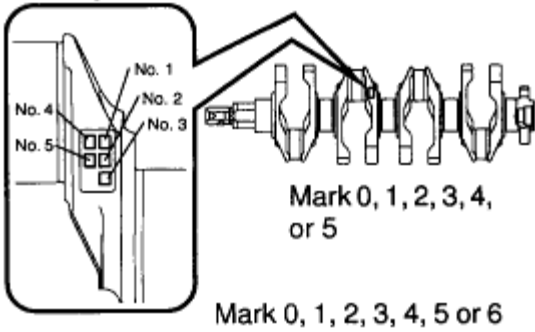

A1037E

ZOOM

SIZED FOR PRINT

Cylinder block Number mark	Crank shaft number mark					
	0	1	2	3	4	5
0	1	1	1	2	2	2
1	1	1	2	2	2	3
2	1	2	2	2	3	3
3	2	2	2	3	3	3
4	2	3	3	3	4	4
5	3	3	3	4	4	4
6	3	3	4	4	4	5

EXAMPLE: Cylinder block "4", Crank shaft "3", Use bearing "3"

ZOOM


SIZED FOR PRINT

Item	Mark	mm (in.)
Cylinder block main journal bore diameter (A)	"0"	52.000 - 52.003 (2.0472 - 2.0473)
	"1"	52.003 - 52.005 (2.0473 - 2.0474)
	"2"	52.005 - 52.007 (2.0474 - 2.0475)
	"3"	52.007 - 52.010 (2.0475 - 2.0476)
	"4"	52.010 - 52.012 (2.0476 - 2.0477)
	"5"	52.012 - 52.014 (2.0477 - 2.0478)
Crankshaft main journal diameter (B)	"0"	47.998 - 48.000 (1.8897 - 1.8898)
	"1"	47.996 - 47.998 (1.8896 - 1.8897)
	"2"	47.994 - 47.996 (1.8895 - 1.8896)
	"3"	47.992 - 47.994 (1.8894 - 1.8895)
	"4"	47.990 - 47.992 (1.8893 - 1.8894)
	"5"	47.988 - 47.990 (1.8892 - 1.8893)
1ZZ-FE: Standard bearing center wall thickness	"1"	1.993 - 1.996 (0.0785 - 0.0786)
	"2"	1.996 - 1.999 (0.0786 - 0.0787)
	"3"	1.999 - 2.002 (0.0787 - 0.0788)
	"4"	2.002 - 2.005 (0.0788 - 0.0789)
2ZZ-GE Standard bearing center wall thickness	"1"	1.989 - 1.992 (0.0783 - 0.0784)
	"2"	1.992 - 1.995 (0.0784 - 0.0785)
	"3"	1.995 - 1.998 (0.0785 - 0.0787)
	"4"	1.998 - 2.001 (0.0787 - 0.0788)
	"5"	2.001 - 2.004 (0.0788 - 0.0789)

ZOOM

SIZED FOR PRINT


- o. 2ZZ-GE: If using standard bearing, replace it with one having the same number. If the number of the bearing cannot be determined, refer to the following table to select bearing.

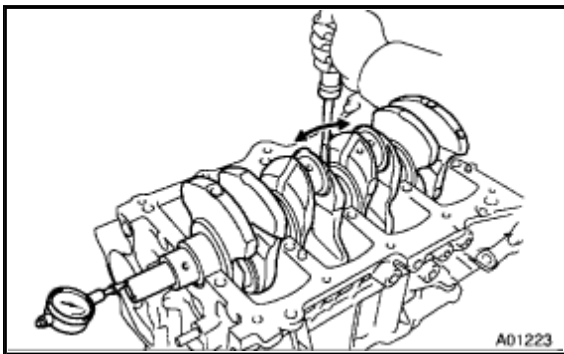

ZOOM

SIZED FOR PRINT


- 23. CHECK [CRANKSHAFT](#) THRUST CLEARANCE Using a dial indicator, measure the thrust clearance while prying the [crankshaft](#) back and forth with a screwdriver. Standard thrust clearance: **0.04 - 0.24 mm (0.0016 - 0.0094 inch)** Maximum thrust clearance: **0.30 mm (0.0118 inch)** If the thrust clearance is greater than maximum, replace the thrust washers as a set. Thrust washer thickness: **2.430 - 2.480 mm (0.0957 - 0.0976 inch)**
- 24. REMOVE [CRANKSHAFT](#)
 - a. Lift out the crankshaft.
 - b. Remove the 5 upper main bearings and 2 thrust washers from the cylinder block. **HINT:** Arrange the main bearings and thrust washers in the correct order.

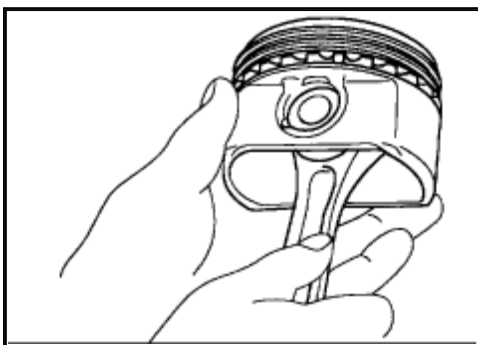


ZOOM

SIZED FOR PRINT

 - 25. CHECK FIT BETWEEN [PISTON](#) AND PISTON PIN Try to move the [piston](#) back and forth on the piston pin. If any movement is felt, replace the piston and pin as a set.



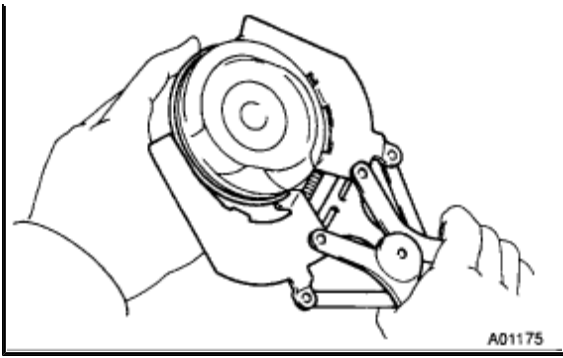


ZOOM

SIZED FOR PRINT

26. REMOVE PISTON RINGS

- a. Using a [piston ring](#) expander, remove the 2 compression rings.
- b. Remove the 2 side rails and oil ring by hand. **HINT:** Arrange the [piston rings](#) in the correct order only.


27. DISCONNECT [CONNECTING ROD](#) FROM [PISTON](#)

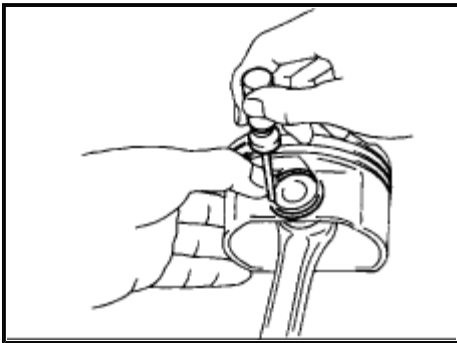

ZOOM

SIZED FOR PRINT

- a. Using a small screwdriver, pry out the 2 snap rings.

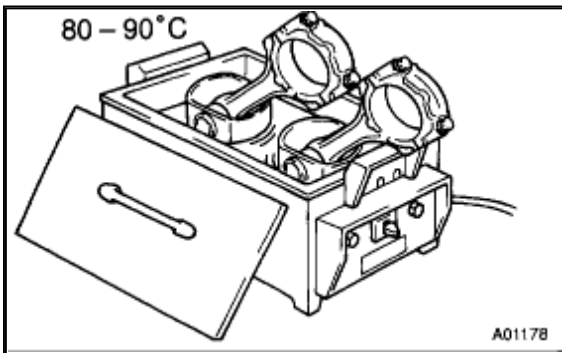


ZOOM

SIZED FOR PRINT

- b. 1ZZ-FE: Gradually heat the [piston](#) to 80 - 90°C (176 - 194°F) .



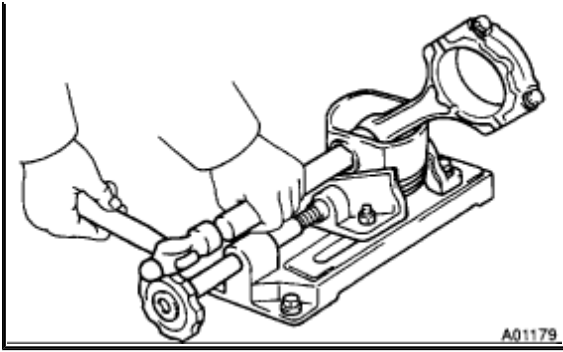

ZOOM

SIZED FOR PRINT

- c. 1ZZ-FE: Using a plastic-faced hammer and brass bar, lightly tap out the piston pin and remove the [connecting rod](#).

HINT:

- The [piston](#) and pin are a matched set.
 - Arrange the pistons, pins, rings, [connecting rods](#) and bearings in the correct order.
- d. 2ZZ-GE: Remove the pin and [connecting rod](#) from the [piston](#).