


Service and Repair

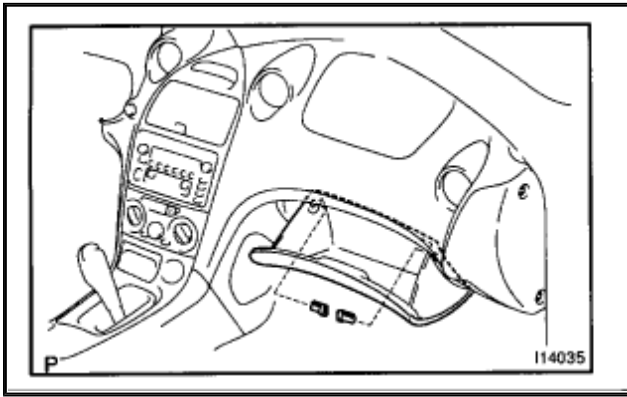


ZOOM

SIZED FOR PRINT

1. REMOVE [AIR REFINER FILTER](#)

- a. Remove the 2 pins in the glove box and open the glove box widely by pulling it down.

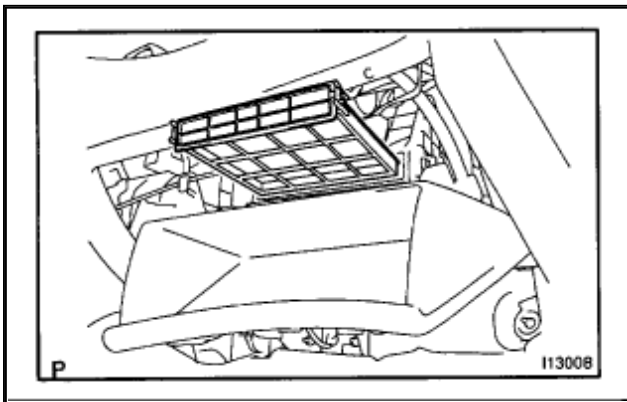

ZOOM

SIZED FOR PRINT

- b. Pull out the filter case.
- c. Remove the [air refiner filter](#) from the filter case.

2. INSTALL [AIR REFINER FILTER](#)

- a. Install the air refiner filter to filter case.
- b. Install the filter case.
- c. Close the glove box and install the 2 pins to it.