


Testing and Inspection


INSPECTION

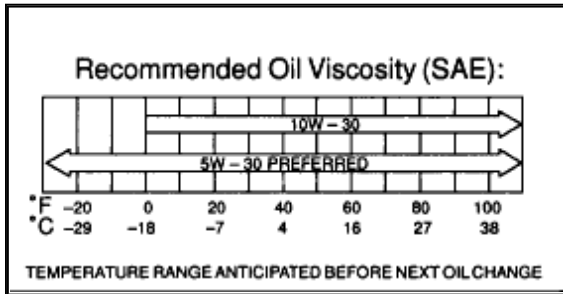

ZOOM

SIZED FOR PRINT


1. CHECK ENGINE OIL QUALITY Check the oil for deterioration, entry of water, discoloring or thinning. If the quality is visibly poor, replace the oil. Oil grade: **API grade or SJ, Energy-Conserving or ILSAC multi-grade engine oil** is recommended. **SAE 5W-30** is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.
2. CHECK ENGINE OIL LEVEL After warming up the engine and then 5 minutes after the engine stop, oil level should be between the "L" and F marks on the dipstick. If low, check for leakage and add oil up to the "F" mark. **NOTICE:** Do not fill with engine oil above the "F" mark.
3. REMOVE OIL PRESSURE SWITCH, AND INSTALL OIL PRESSURE GAUGE

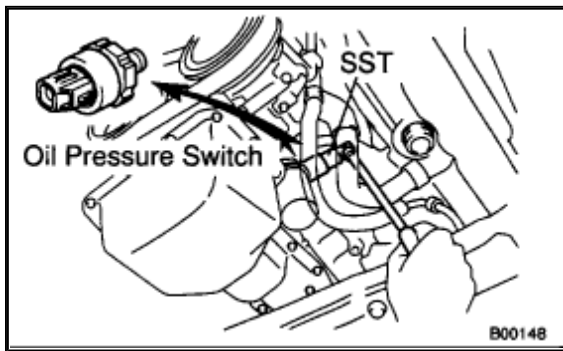

ZOOM

SIZED FOR PRINT

- a. Using Special Service Tool (SST) , remove the oil pressure switch (SST) 09816-30010

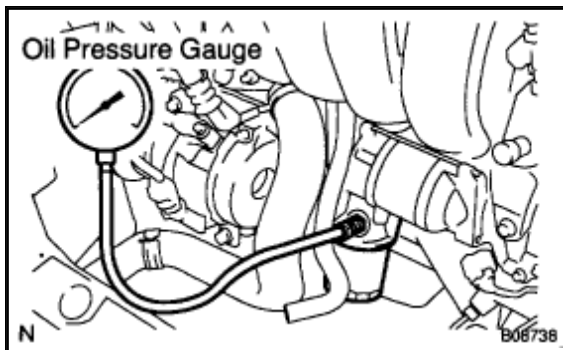


ZOOM

SIZED FOR PRINT

- b. Install the oil pressure gauge.

4. WARM UP ENGINE Allow the engine to warm up to normal operating temperature.
5. CHECK OIL PRESSURE Oil pressure: At [idle speed](#)

1ZZ-FE: **29 kPa (0.3 kgf/cm², 4.3 psi)** or more
2ZZ-GE: **39.2 kPa (0.4 kgf/cm², 5.7 psi)** or more
At 3,000 rpm
1ZZ-FE: **294 - 539 kPa (3.0 - 5.5 kgf/cm², 43 - 78 psi)**

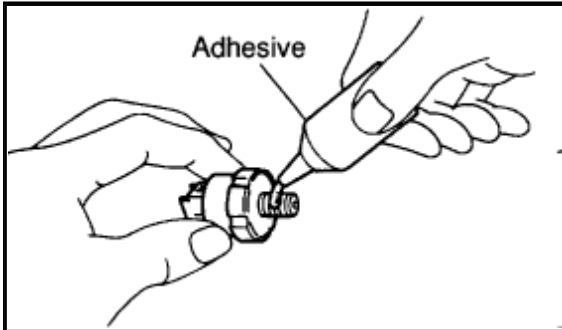

ZOOM


SIZED FOR PRINT

6. REMOVE OIL PRESSURE GAUGE AND REINSTALL OIL PRESSURE SWITCH

- a. Remove the oil pressure gauge.
- b. Apply adhesive to 2 or 3 threads of the oil pressure switch. Adhesive: Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent
- c. Using SST, install the oil pressure switch. SST 09816-30010 Torque: **13 Nm (130 kgf-cm, 9 ft. lbs.)**

7. START ENGINE AND CHECK FOR LEAKS


8. 2ZZ-GE: REMOVE OIL PRESSURE SWITCH OF OIL CONTROL VALVE, AND INSTALL OIL PRESSURE GAUGE

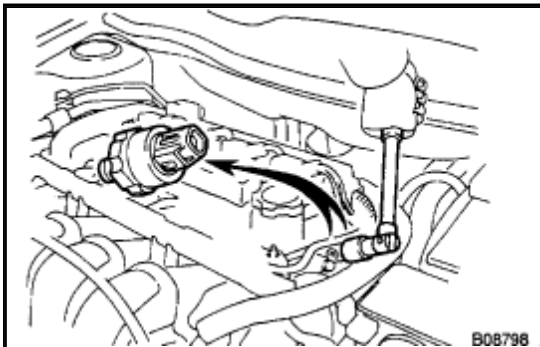

ZOOM

SIZED FOR PRINT

 - a. Using SST, remove the oil pressure switch. SST 09816-30010






ZOOM

SIZED FOR PRINT

b. Install the oil pressure gauge.

9. 2ZZ-GE: WARM UP ENGINE Allow the engine to warm up to normal operating temperature.
10. 2ZZ-GE: CHECK OIL PRESSURE for VVTL Oil pressure: At idle speed: **39.2 kPa (0.4 kgf/cm², 5.7 psi)**

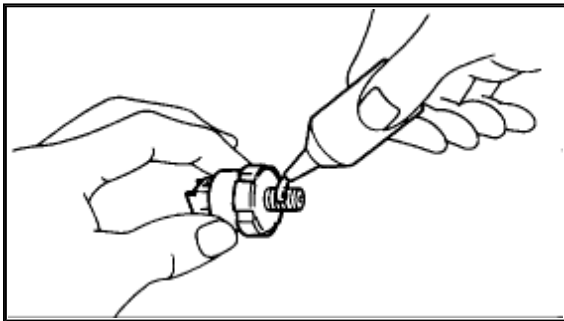

ZOOM

SIZED FOR PRINT

11. 2ZZ-GE: REMOVE OIL PRESSURE GAUGE AND REINSTALL OIL PRESSURE SWITCH OF OIL CONTROL VALVE
 - a. Remove the oil pressure gauge.
 - b. Apply adhesive to 2 or 3 threads of the oil pressure switch. Adhesive: Part No. 08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent
 - c. Using SST, install the oil pressure switch. SST 09816-30010 Torque: **13 Nm (130 kgf-cm, 9 ft. lbs.)**
12. START ENGINE AND CHECK FOR LEAKS