


Service and Repair

REMOVAL

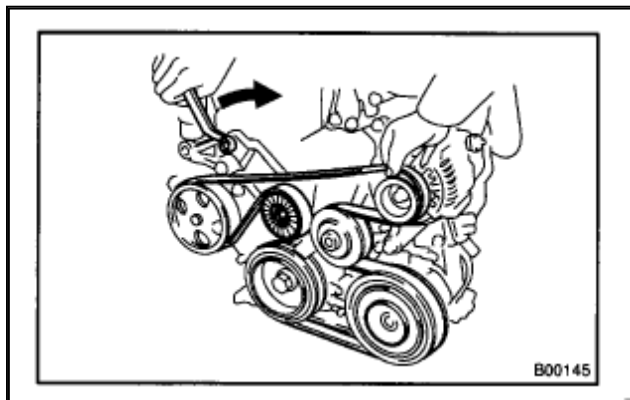


ZOOM

SIZED FOR PRINT

REMOVE DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner arm clockwise, and remove the drive belt.

INSTALLATION

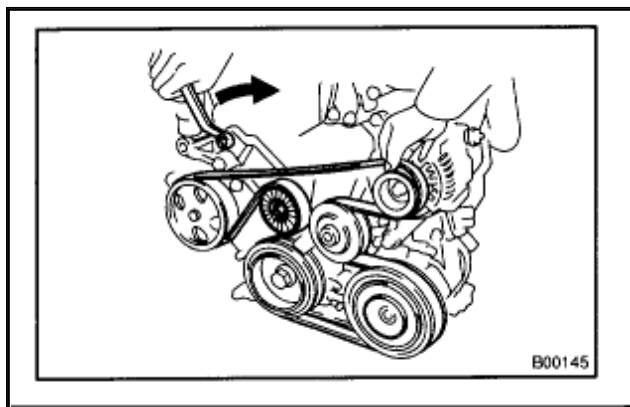

ZOOM

SIZED FOR PRINT

1. **INSTALL DRIVE BELT** Turning the drive belt tensioner arm clockwise, and install the drive belt.
2. **CHECK DRIVE BELT INSTALLING CONDITION**